GenX CDMA Garmin Wired Tracking Device Installation Instructions with JBus Kit

1. Disconnect the negative connection on vehicle's battery before beginning installation.
2. Identify Power Sources:
   - The **Red Wire** is for *Power*.
   - The **White Wire** is for the *Ignition*.
   - The **Black Wire** is the *Ground Wire*.
3. For devices that have an external antenna it should be placed where there is minimal metal above it.

   Do Not Power on the device until the antenna wires are fully connected.
4. Once the wires are securely and safely connected, you may connect the power cable to the device. Then, connect the negative cable back to your vehicle's battery.
5. Once power is connected, you should see the 2 LEDs on the front of the devices light up (his may take several minutes). After you have 2 lights, you will need to drive your vehicle for several minutes to get your vehicle to locate.

Note: Wiring for **PTO** is as follows:
The **Red** and **White** striped wire is PTO 1
The **Blue** wire is for PTO 2

Tools Needed:

Voltage Meter, Standard and Phillips screwdrivers, Standard or Metric Socket Set (depending on vehicle's manufacturer), Screws or Zip/Cable Ties

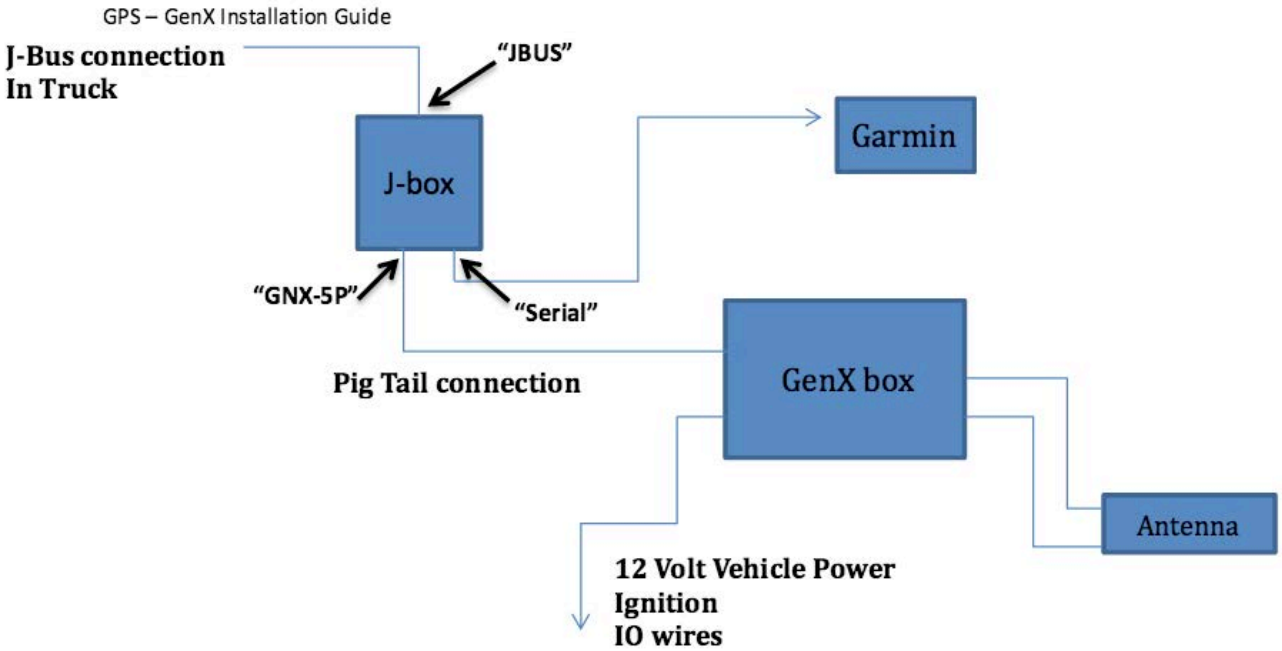

RHINO FLEET TRACKING
RELENTLESS CUSTOMER CARE

For more detailed installation information, including pictures, go to:

www.rhinofleettracking.com/install

View your account at: http://www.rhinofleettracking.com